



Pontiac Radio Wiring Diagrams And Hitachi Ac Wiring Diagram By XPMissions

Pontiac radio wiring diagrams and hitachi ac wiring diagram

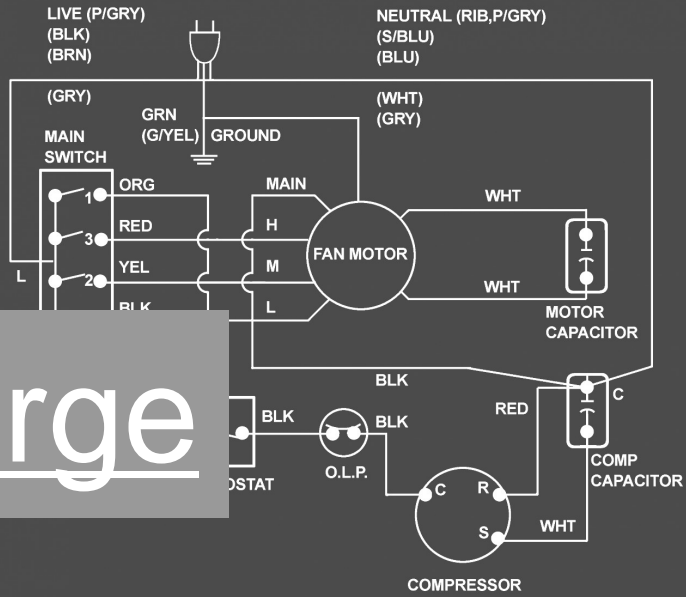

Click to enlarge

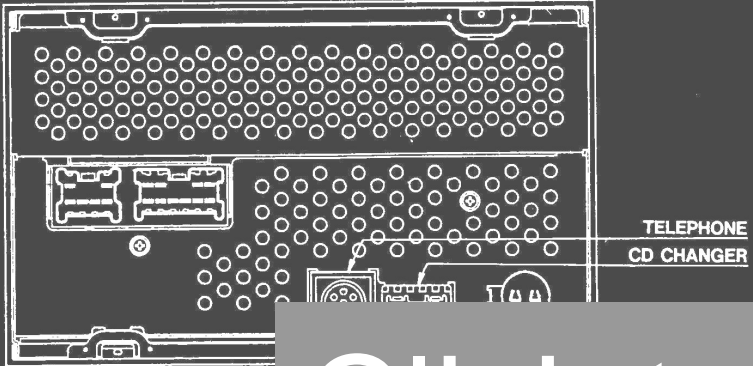

A	FRONT LEFT (+) OUTPUT
B	FRONT RIGHT (+) OUTPUT
C	ILLUMINATION
D	Acc
E	FRONT LEFT (-) OUTPUT
F	FRONT RIGHT (-) OUTPUT
G	ANTENNA SIGNAL
H	BACK UP
I	ILLUMI. CONTROL
J	GND
K	REAR AMP. TURN-ON SIGNAL
L	REAR RIGHT (+) OUTPUT
M	GND
N	REAR LEFT (-) OUTPUT
O	REAR LEFT (+) OUTPUT
P	REAR RIGHT (-) OUTPUT

1	TEL-ON SIGNAL INPUT
2	Rch INPUT (+)
3	
4	GND
5	Rch INPUT (-)
6	

A	Lch INPUT (+)
B	Rch INPUT (+)
C	COMBI→CD (TXD)
D	COMBI-ON SIGNAL OUTPUT
E	Lch INPUT (-)
F	Rch INPUT (-)
G	GND
H	GND
I	
J	SLAVE-IC REQUEST
K	CD→COMBI (RXD)
L	AUX-ON SIGNAL INPUT