
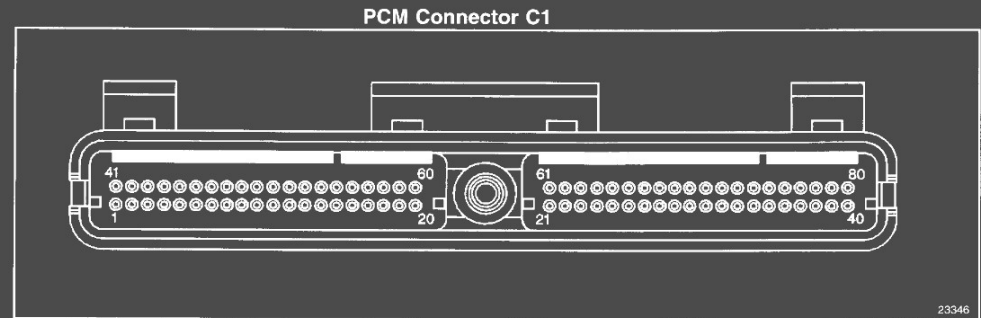


Stereo Wiring Diagram Silverado And Chevy Silverado Sensor Wiring Diagram By XPMissions

Stereo wiring diagram silverado and chevy silverado sensor wiring diagram

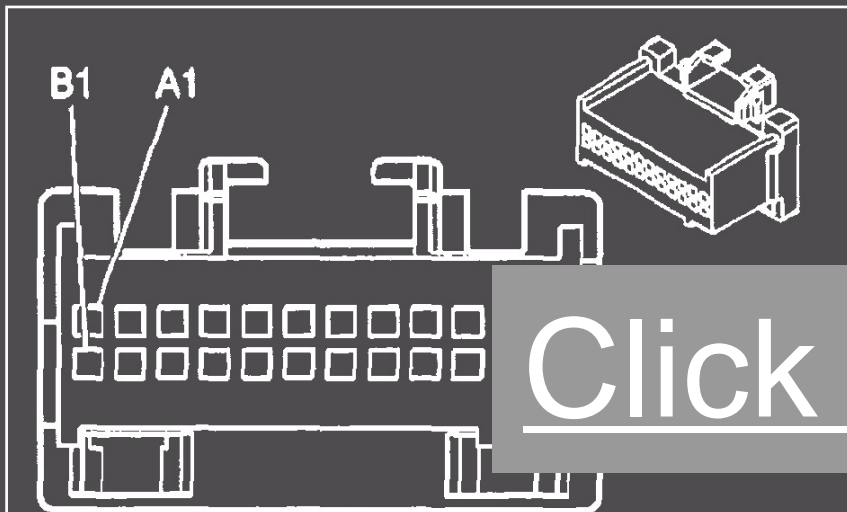

Click to enlarge

Connector Part Information		<ul style="list-style-type: none"> • 12110088 • 24 Way F Micro-Pack 100 Series (GRY) 	
Pin	Wire Color	Circuit No.	Function
A1	ORN	1044	Class 2 Serial Data
A2	—	—	Not Used
A3	PPL	493	Rear Seat Audio Enable Signal (w/o U32)
A4-A5	—	—	Not Used
A6	PNK	314	Radio On Signal
A7	DK BLU	1796	Steering Wheel Controls Signal
A8	TAN	201	Left Front Speaker

Sealed (BLU)			
Function			
41	—	—	Refrigerant Pressure Sensor
42	—	—	Tank Pressure Sensor
43	—	—	Sensor
44	—	—	Not Used
45	—	—	Not Used
46	—	—	Not Used
47	—	—	Not Used
48	—	—	Not Used
49	—	—	Not Used
50	—	—	Not Used
51	—	—	Not Used
52	—	—	Not Used
53	BLK	407	Low Reference Transmission Temperature Sensor
54	BLK	407	Low Reference MAP Sensor
55	—	—	Not Used
56	—	—	Not Used
57	ORN	340	Battery Positive Voltage
58	DK GRN	1049	ECM/PCM/VCM Class 2 Serial Data
59	—	—	Not Used
60	BLK	452	Low Reference
61	PNK/BLK	632	Low Reference Camshaft Position Sensor
62-64	—	—	Not Used
65	PPL	1670	HO2S High Signal Bank 2 Sensor 2
66	PPL	1666	HO2S High Signal Bank 2 Sensor 1
67	—	—	Not Used
68	PPL/WHT	1668	HO2S High Signal [Bank 1 Sensor 2
69	PPL/WHT	1665	HO2S High Signal Bank 1 Sensor 1
70	BRN	1174	Oil Level Switch Signal
71-72	—	—	Not Used
73	BRN/WHT	633	CMP Sensor Signal
74	YEL	410	ECT Sensor Signal
75	—	—	Not Used
76	BLK/WHT	845	Fuel Injector 5 Control
77	DK BLU/WHT	878	Fuel Injector 8 Control
78	—	—	Not Used
79	GRY or WHT	587 or 687	Skip Shift Solenoid Control M/T or 3-2 Shift Solenoid Control A/T
80	BLK	407	Low Reference